

DSC LCD 5500 TOUCHPAD - QUICK REFERENCE GUIDE

Arming System Leaving: Green Ready Light must be on
Press in arming code or press away Key for 2 seconds
RED-ARMED light will come on
the touchpad will start beeping

Disarming System: When entering the premises you will hear continuous beep
Press in 4 digit Code to disarm

Arming System Staying: Green Ready Light must be on
(Doors on delay) Press in arming code or press stay Key for 2 seconds
RED-ARMED light will come on .

Arming System Staying: Green Ready Light must be on
(Doors on instant) Press * 9 then enter arming code
RED-ARMED light will flash .

If Green Ready Light is NOT on: Press either < > key to display the open zone
Correct the problem or bypass the zone

Bypassing a Zone: Press * I then press either <> key until the zone you want
To by pass is displayed then press the * key
a **B** will appear next to the zone name
press the # to exit the menu and arm the system

DISARMING THE SYSTEM AUTOMATICALLY UNBYPASSES THE ZONES

If an Alarm Occurs: Press in 4 digit code to disarm system
call AASCO 410 766 8336 and give correct password

***** IF AN ALARM OCCURS THAT IS NOT FALSE DO NOT ENTER PREMISE**
UNTIL POLICE HAVE CLEARED THE BUILDING. ***

If Yellow Trouble Light Comes on:
Press * 2 then press either < > key to display trouble condition

