

MPI 25 CONTROL PANEL - QUICK REFERENCE GUIDE

The brain of your security system is your Control Panel.

The status / indicator lights will give you the necessary information to operate your system. On the front of your control panel these lights are designated AC and STATUS.

The AC light should be on: This indicates that the panel is receiving power.

If this light is off, check the circuit breaker and the transformer.

If the AC light can not be re-established, call for service.

The Status light displays the current mode of operation of your system:

If the status light is: OFF - not secure – Check the secured area for a door, window or other security device that is not secure. If the STATUS light can not be re-established, even though all areas are secure, call for service.

Flashing Slowly - ready to arm – The system is secure and ready to arm.

Flashing Quickly- armed – The system is armed.

Solid - violation – The system has been activated, an intrusion has been detected. An intruder may be on the premises.

Instant/Delay Slide Switch: Delay – Is the correct position for the normal operation of your system. This allows you to enter and exit through your pre-determined entry doors.

Instant – This will eliminate the delay on the exit/entry door(s).

Panic Button: Your system includes a 24 hour panic button located on the front your control panel. It is red or brown approximately ½ inch square and will trip your siren when pushed. To silence the siren you must disarm your system in the normal fashion.

Toggle Switch: Your system may include a toggle switch located on the front or side of your control panel or remotely located in a closet or by a specific device. The toggle switch either includes or excludes the device in your system.

