

## DSC PK5500 TOUCHPAD - QUICK REFERENCE GUIDE

**Arming System Leaving:** Green Ready Light  must be on  
Press in arming code or press away Key for 2 seconds  
RED-ARMED light will come on  
the touchpad will start beeping

**Disarming System:** When entering the premises you will hear continuous beep  
Press in 4 digit Code to disarm

**Arming System Staying:** Green Ready Light  must be on  
**(Doors on delay)** Press in arming code or press stay Key for 2 seconds  
RED-ARMED light will come on .

**Arming System Staying:** Green Ready Light  must be on  
**( Doors on instant)** Press \* 9 then enter arming code  
RED-ARMED light will flash .

**If Green Ready Light  is NOT on:** Press either < > key to display the open zone  
Correct the problem or bypass the zone

**Bypassing a Zone:** Press \* I then press either <> key until the zone you want  
To by pass is displayed then press the \* key  
a **B** will appear next to the zone name  
press the # to exit the menu and arm the system

### DISARMING THE SYSTEM AUTOMATICALLY UNBYPASSES THE ZONES

**If an Alarm Occurs:** Press in 4 digit code to disarm system  
call AASCO 410 766 8336 and give correct password

**\*\*\* IF AN ALARM OCCURS THAT IS NOT FALSE DO NOT ENTER PREMISE**  
**UNTIL POLICE HAVE CLEARED THE BUILDING. \*\*\***

**If Yellow Trouble Light Comes on:**  
Press \* 2 then press either < > key to display trouble condition

